


# Cable Tray Expand

## CONTENT:

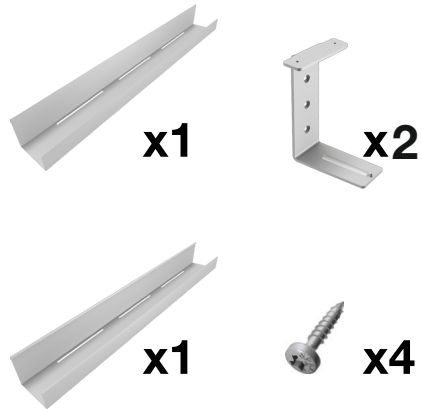

## 1 DECIDE LENGTH USING MATRIX


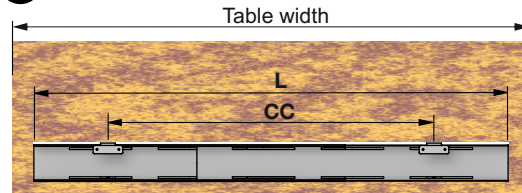


Table width	L <sub>max</sub>	CC
2000	2000	1000
	1955	1200
1800	1800	800
	1755	1000
1600	1600	1050
	1555	800
1400	1400	800
1200	1200	800

*Note: Minimum possible length is 1050 mm and maximum recommended length is 2000 mm.*


## 2a ATTACH TO TABLE

Measure up the distance and mount where the hanging brackets are planned to go. Make sure to align the two brackets properly.

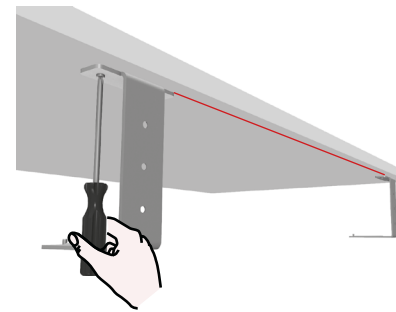

## 2b ATTACH TO SCREEN

Measure up the distance and mount the hanging brackets to the desk screen using three adequate countersunk Ø6 mm wide wood screws (not included).

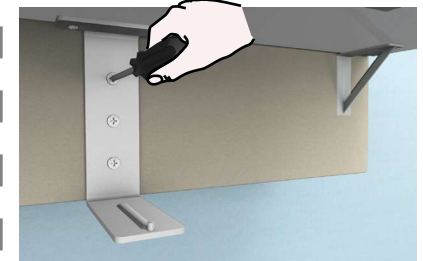

## 3 ROTATE

Decide on which direction the cable should be turned towards, and make sure the small pegs from the hangers go through the cable tray track.




Option 1: Cable trays closed towards the back and open towards the front.



Option 2: Cable trays open towards the back and closed towards the front.

## 4 ASCERTAIN

Make sure the small pegs from the hanging brackets go through the cable tray tracks (see marked areas).

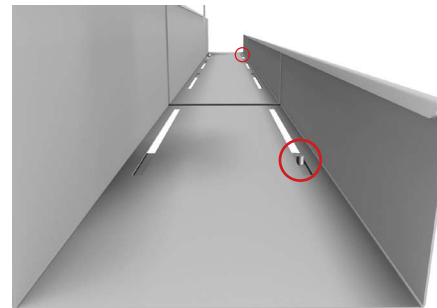

## 6 TILT AND INSTALL

Turn to facilitate installing desired components into the cable tray and turn it back once done.

